


Installation update for all hand feed control handles

Kit: 29834-386

(Fig 1)

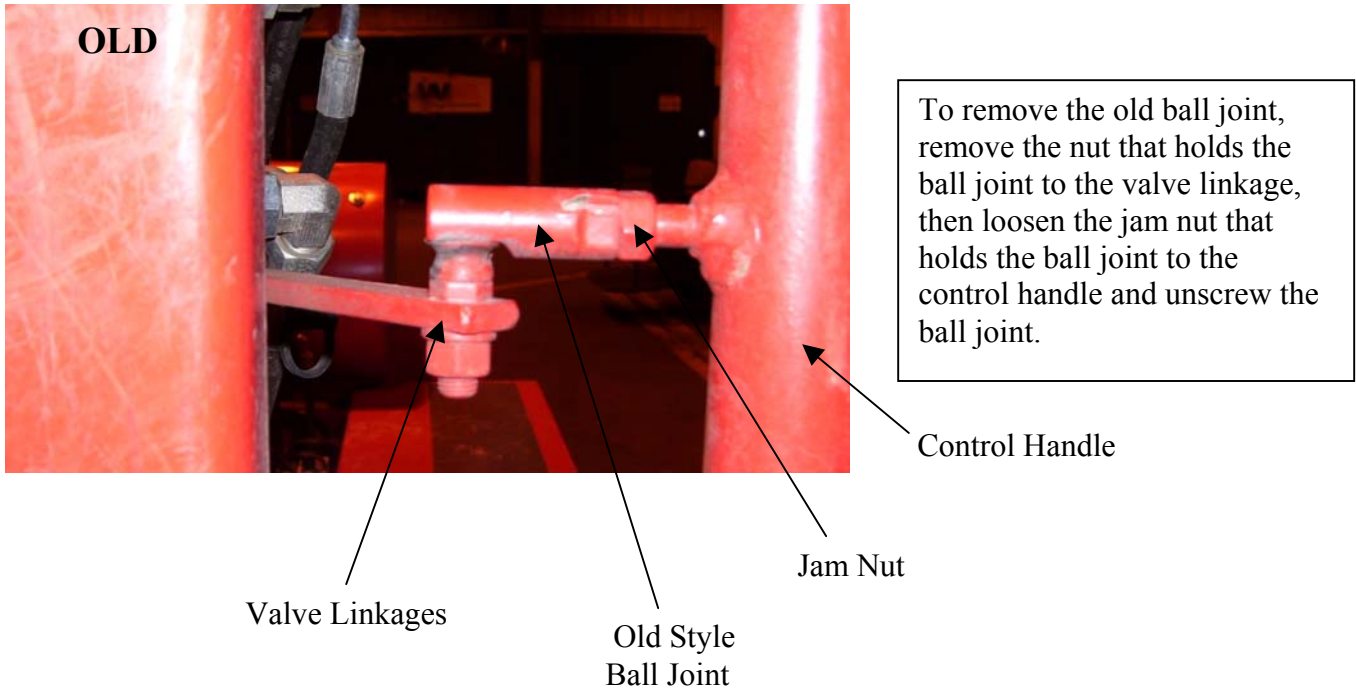

(Fig 2)

To install the new heim joint, place both the valve linkage and control arm in the neutral position. Screw the new heim joint on to the bolt that is welded to the control handle to the point that the hole in the heim joint is lined up with the bolt hole in the valve linkage. Put the bolt supplied with the new heim joint through the new heim joint and valve linkage insuring that you put the washers in place to take up the space between the new heim joint and the linkage (fig 2). Once every thing is in place and lined up, tighten the nut and bolt that attaches the heim joint to the valve linkage, then tighten the jam nut.

